



H1-1-1 AXLE ASSEMBLY STEERING



046970

A	9802/6000	Book Miniscopic	1
1	⊘ 非卖品	Beam axle > 不再提供	1
2	:1209/0019	Bush spring	1
3	:1209/0017	Bush	1
4	:808/00098	Bush	4
5	:830/00061	Tube spacer	2
6	1450/0001	Nipple Grease Straight 1/8" < 更替	4
7	⊘ 非卖品	Spacer	1
8	106/13404	Pin pivot > 不再提供	1
9	1305/3430	Bolt 更替 >	1
10	1340/0403Z	Nut Lock 1/2inUNF < 更替	1
11	816/00420	Adapter 90 deg. 更替 >	2
12	629/03000	Hose grease	1
13	629/03200	Hose	1
14	200/04604	Adaptor < 更替	2
15	911/08700	Pin pivot	1
16	⊘ 非卖品	Stub axle right hand > 不再提供	1
17	⊘ 非卖品	Axle stub left hand > 不再提供	1
18	916/01700	Bearing thrust	2
19	823/00008	Spacer	0

19	823/00009	Spacer	0
20	103/21115	Washer fibre	2
21	⊗ 非卖品	Collar > 不再提供	2
22	⊗ 非卖品	Bolt 更替 >	2
23	1340/0603	Nut 更替 >	2
24	103/21117	Rod track	1
25	107/02301	Coupling track rod RH thread > 不再提供	1
26	107/02302	Coupling track rod LH thread	1
27	⊗ 非卖品	Bolt > 不再提供	2
28	1416/0011	Washer	2
29	⊗ 非卖品	Nut lock 更替 >	2
30	835/00005	Cover dust > 不再提供	2
31	1340/0603	Nut 更替 >	2
32	⊗ 非卖品	Bolt 更替 > also for item 52	2
33	⊗ 非卖品	Washer 更替 > also for item 52	2
34	106/13501	Hub < 更替	2
34	⊗ 非卖品	Hub 更替 > MSS part use 106/13501 + items 36,37,45 & 48.	2
35	103/21104	Cap hub > 不再提供	1

36	⊘ 非卖品	Bolt 更替 >	6
37	⊘ 非卖品	Washer 更替 >	6
38	813/00113	Gasket	2
39	106/63101	Nut	1
40	2103/1316	Pin split 6 x 71 < 更替	1
41	1413/0012	Washer < 更替	1
42	907/04000	Bearing	1
43	907/03800	Bearing	1
44	813/00156	Seal grease < 更替	1
45	103/21106	Plate retaining	1
46	106/13301	Stud wheel 2 3/8" long	6
47	106/00201	Nut wheel > 不再提供	6
48	1450/0002	Nipple Grease Straight 1/4 < 更替	2
49	⊘ 非卖品	Pin	1
50	823/00089	Spacer Washer < 更替	0