


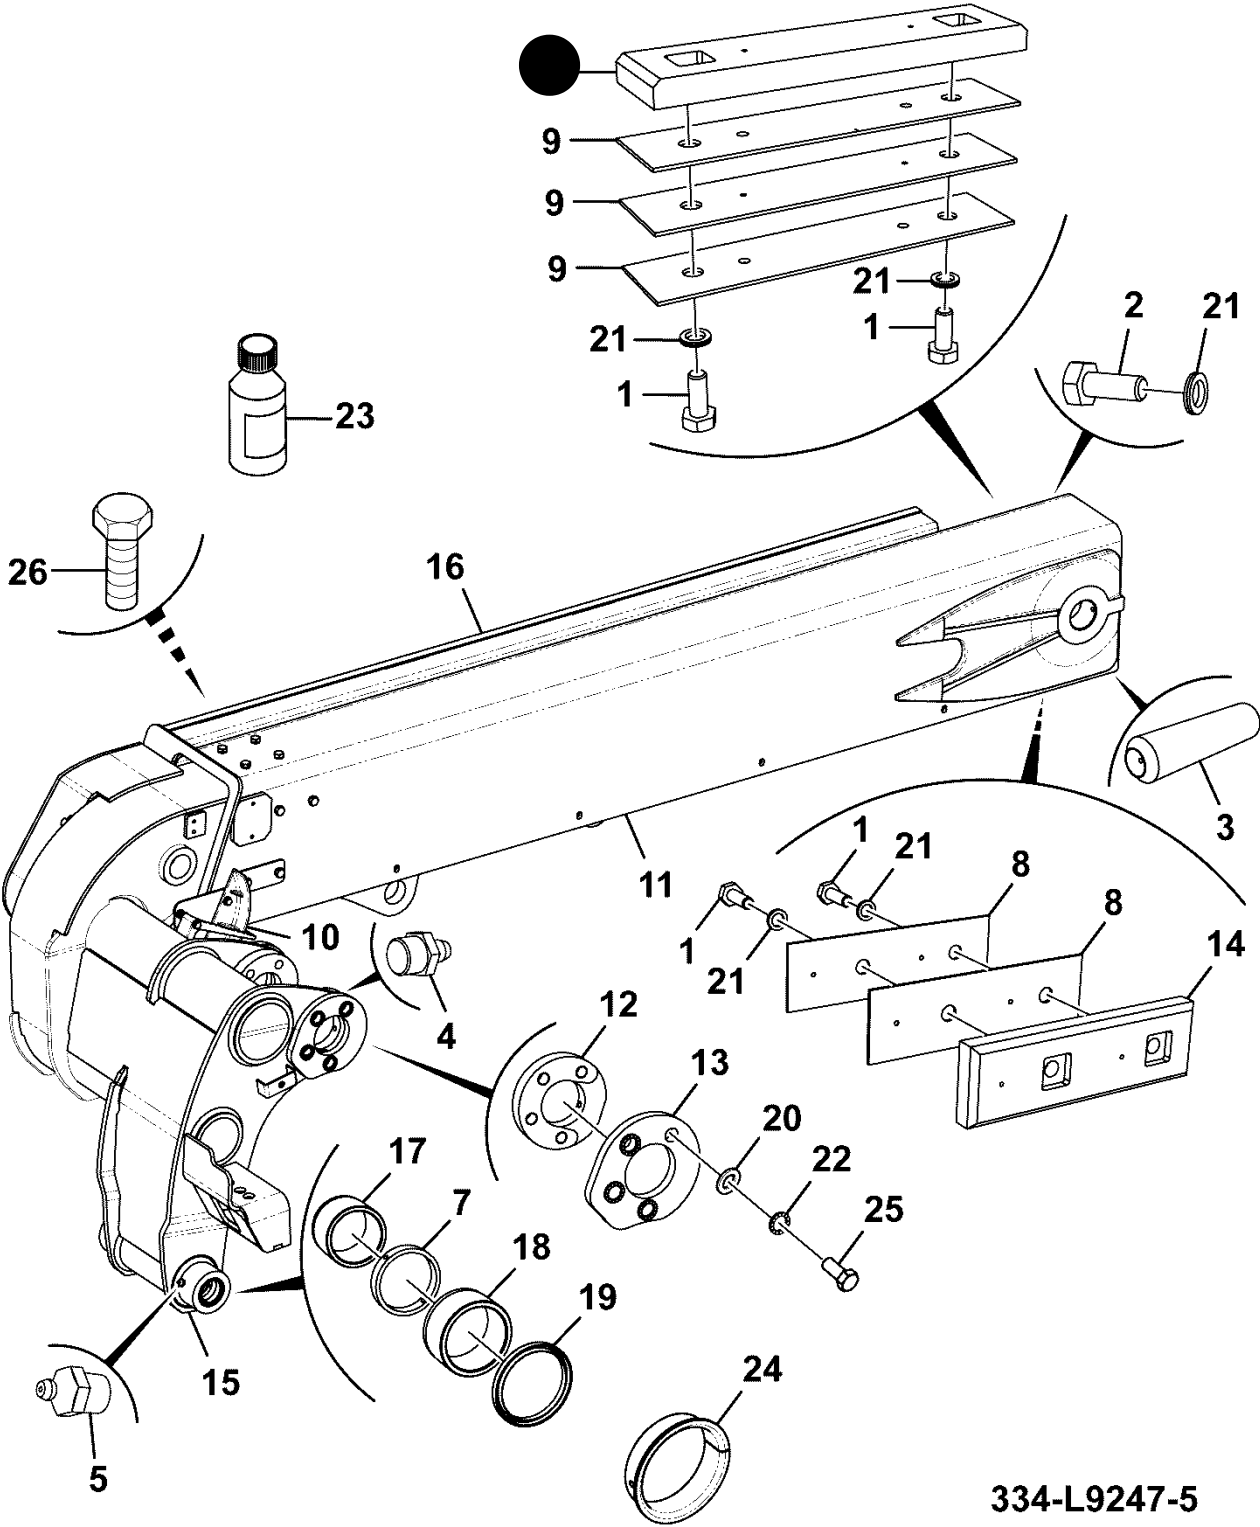

A	⊘ Not for sale	Loader end assembly	1
1	1315/0407D	Setscrew M10 x 25mm G8.8 < Supersession FOR WEAR PADS	28
2	1315/0408D	Setscrew M10 x 30 G8.8 < Supersession	4
3	1390/0410Z	Screw grub FOR MAIN PIVOT	2
4	1450/0001	Nipple Grease Straight 1/8" < Supersession	4
5	1450/0002	Nipple Grease Straight 1/4 < Supersession END PIVOT	2
6	294/00271	Pad wear,long,220mm long	4
7	335/B0173	Spacer Bearing END PIVOT	2
8	294/00449	Packing short, 2mm FOR WEAR PADS	24
9	294/00674	Packing long 2mm FOR WEAR PADS	12
10	⊘ Not for sale	Boom indicator	1
11	335/B8152	Boom Outer Painted 520-40 < Supersession	1
12	296/02532	Ring mounting < Supersession <i>823/00502 is used as a shim between mounting and the ram</i>	2
13	331/47765	Trunnion Mount,Spreader Plate	2
14	332/F6717	Pad wear short	12
15	335/B8117	Boom Inner Painted 520-40 < Supersession	1
16	⊘ Not for sale	Tray hose	1
17	809/00126	Bearing 50 x 60 x 40 END PIVOT	2

18	809/00127	Bearing liner 50mm pivot bore < Supersession END PIVOT	2
19	813/00426	Seal Pivot Pin 50 X 60 X 5 < Supersession END PIVOT	2
20	823/00502	Washer oilon	2
21	823/10261	Washer Nordlock M10 < Supersession FOR WEAR PADS	32
22	823/10323	Washer Nordlock M20 < Supersession	8
23	⊘ Not for sale	JCB Boom Technimulsion 2100 A/R	0
24	809/10063	Bush flanged tilt ram	2
25	1316/0813D	Setscrew M20 X 55 < Supersession	8
26	1430/1001	Screw FOR WEAR PADS	24