


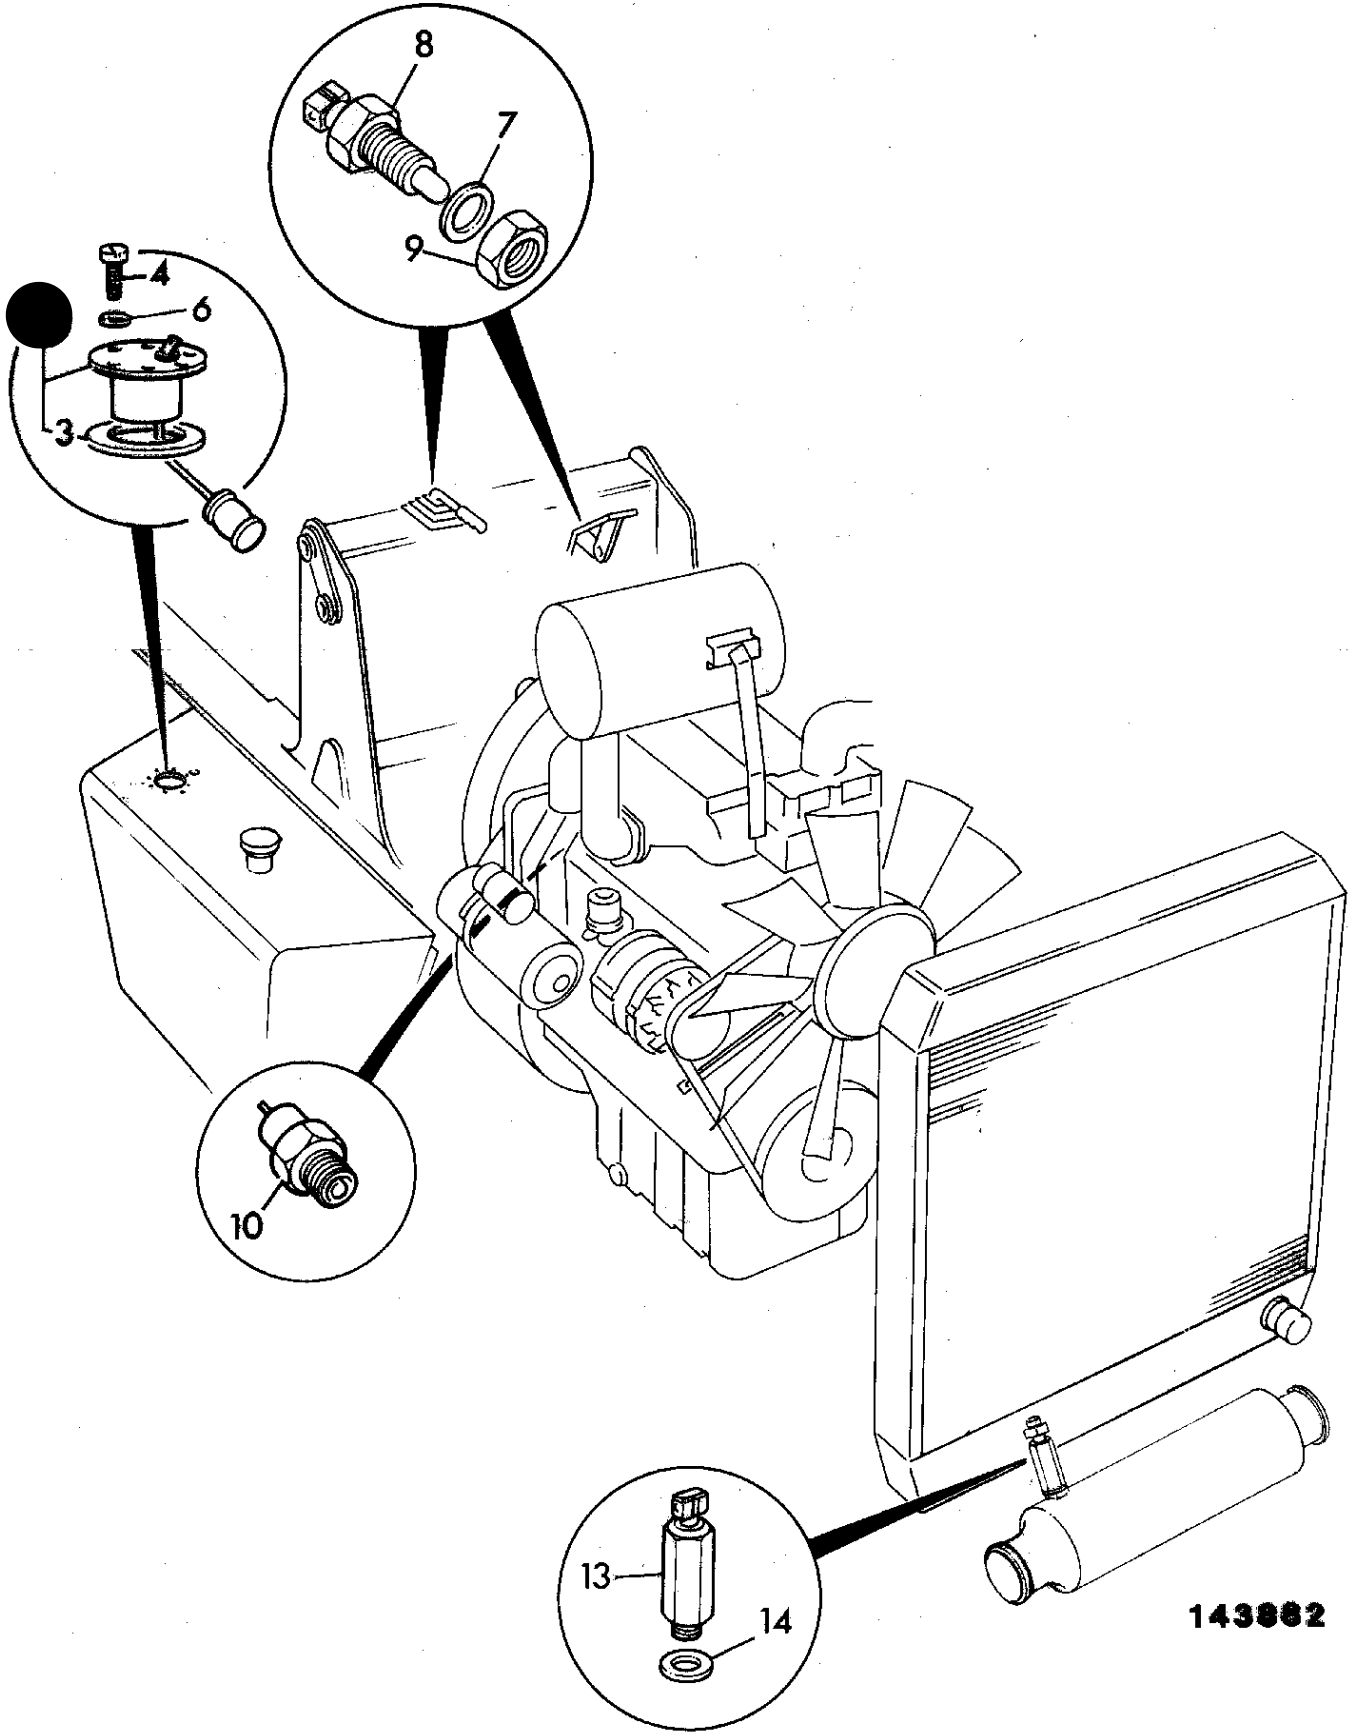

143882

2	716/15100	Sender tank fuel level < Supersession	1
3	:103/77101	Gasket Fuel Level Sensor Supersession >	1
4	826/00520	Screw	6
6	1416/0003	Washer < Supersession	6
7	1411/0005Z	Washer (1/2" Medium) < Supersession Foot brake	1
8	701/42000	Switch Hand Brake, Micro Yellow Top Supersession > Hand brake light.	1
8	⊘ Not for sale	Switch brake light/Dump black top Supersession > Foot brake light	1
9	1340/0402Z	Nut Thin (1/2" UNF) < Supersession	2
10	701/41600	Switch oil pressure M12 red body, AMP < Supersession # 34 should be bonded Washer Part # 1406/0011 MPL 6/9/2022 Transmission pressure	1
13	⊘ Not for sale	Switch oil temperature Supersession > Transmission temperature	1
14	823/00264	Washer Aluminium (I/D=16mm) < Supersession	1