


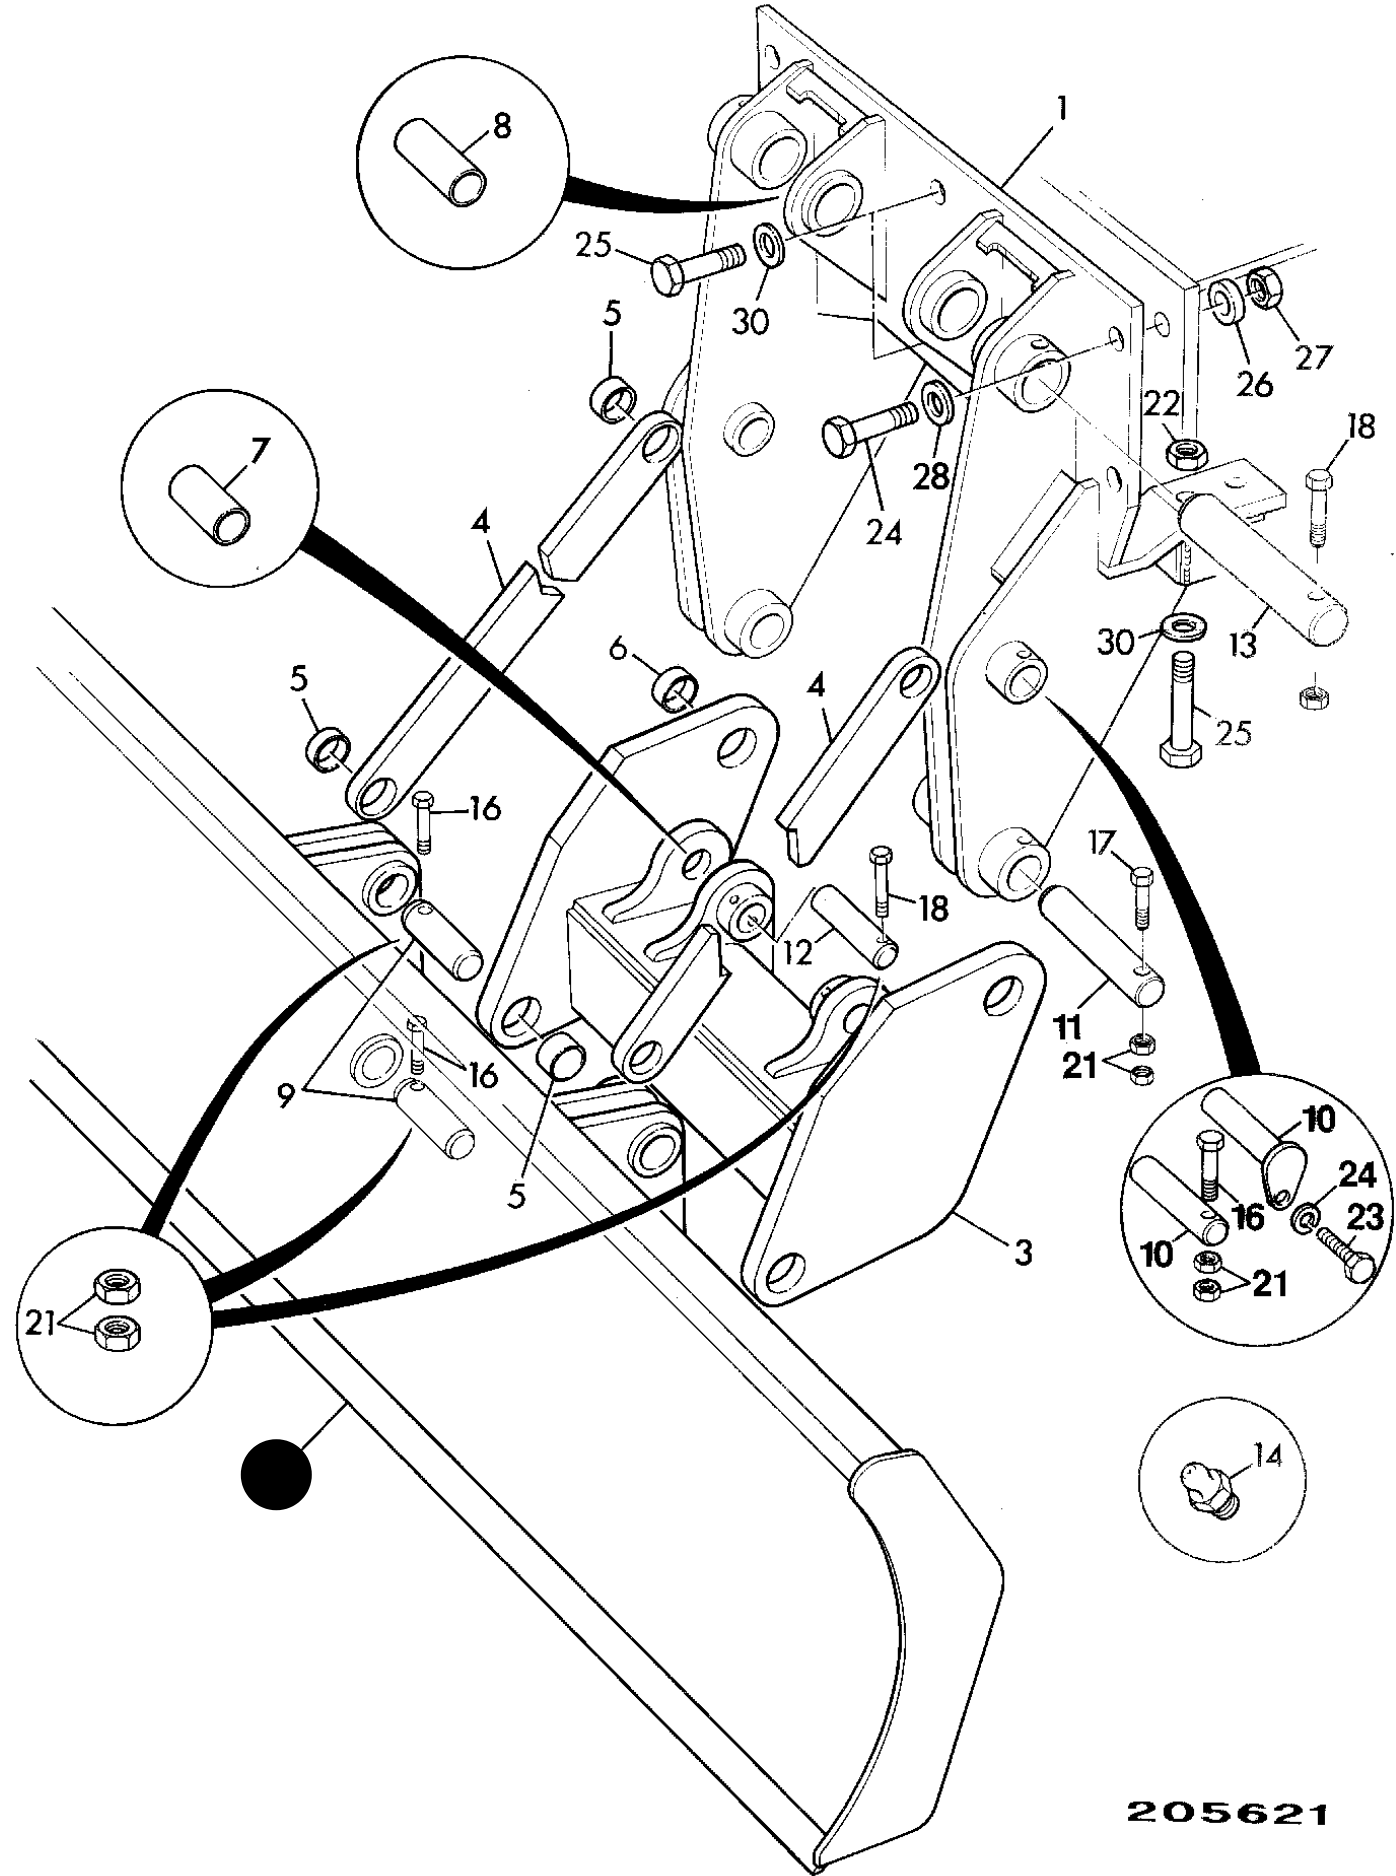

1	⊘ Not for sale	Bracket front dozer mounting <M TBA > No Longer Available	1
1	⊘ Not for sale	Bracket front dozer mounting	1
2	⊘ Not for sale	Boss	4
2	JG0LV346	Blade dozer > No Longer Available	1
2-1	:JLV0377	Toeplate dozer blade	1
2-2	:JLV0378	Plate bottom dozer blade	1
2	JLV1596	Pin pivot	4
2	⊘ Not for sale	Multi Supersession	0
3	⊘ Not for sale	Link lower > No Longer Available	1
4	⊘ Not for sale	Link upper > No Longer Available	2
5	1207/0001	Bush	6
6	1208/0001	Bush	2
7	⊘ Not for sale	'See Remark' Not required see component parts of ram	2
8	⊘ Not for sale	'See Remark' Not required see component parts of ram.	2
9	JLV0493	Pin pivot	4
10	JLV0494	Pin pivot <M TBA Standard pin.	2
10	JLV0755	Pin pivot Pin with retaining plate. > No Longer Available	2
11	JLV0495	Pin pivot	2
12	JLV0496	Pin pivot	2
13	JLV0368	Pin pivot	2

14	1450/0001	Nipple Grease Straight 1/8" < Supersession	12
16	1316/3416Z	Bolt < Supersession	6
17	1316/3418Z	Bolt < Supersession	2
18	1316/3520Z	Bolt	4
21	1371/0301Z	Nut High Strength, M10 < Supersession	16
22	1371/0401Z	Nut Hex 12 < Supersession	8
24	1316/4019Z	Bolt < Supersession	6
25	1316/4026Z	Bolt	4
26	JLV0458	Spacer	1
27	1371/0903Z	Nut self locking < Supersession	6
28	1420/0014Z	Washer M24	6
29	1425/0014Z	Washer spring M24 < Supersession	4
30	1316/0508Z	Screw M12 x 30mm >M TBA < Supersession	2
31	1425/0009Z	Washer Spring M12 >M TBA Supersession >	2