




1400 > H1-1-1 STEERING COLUMN

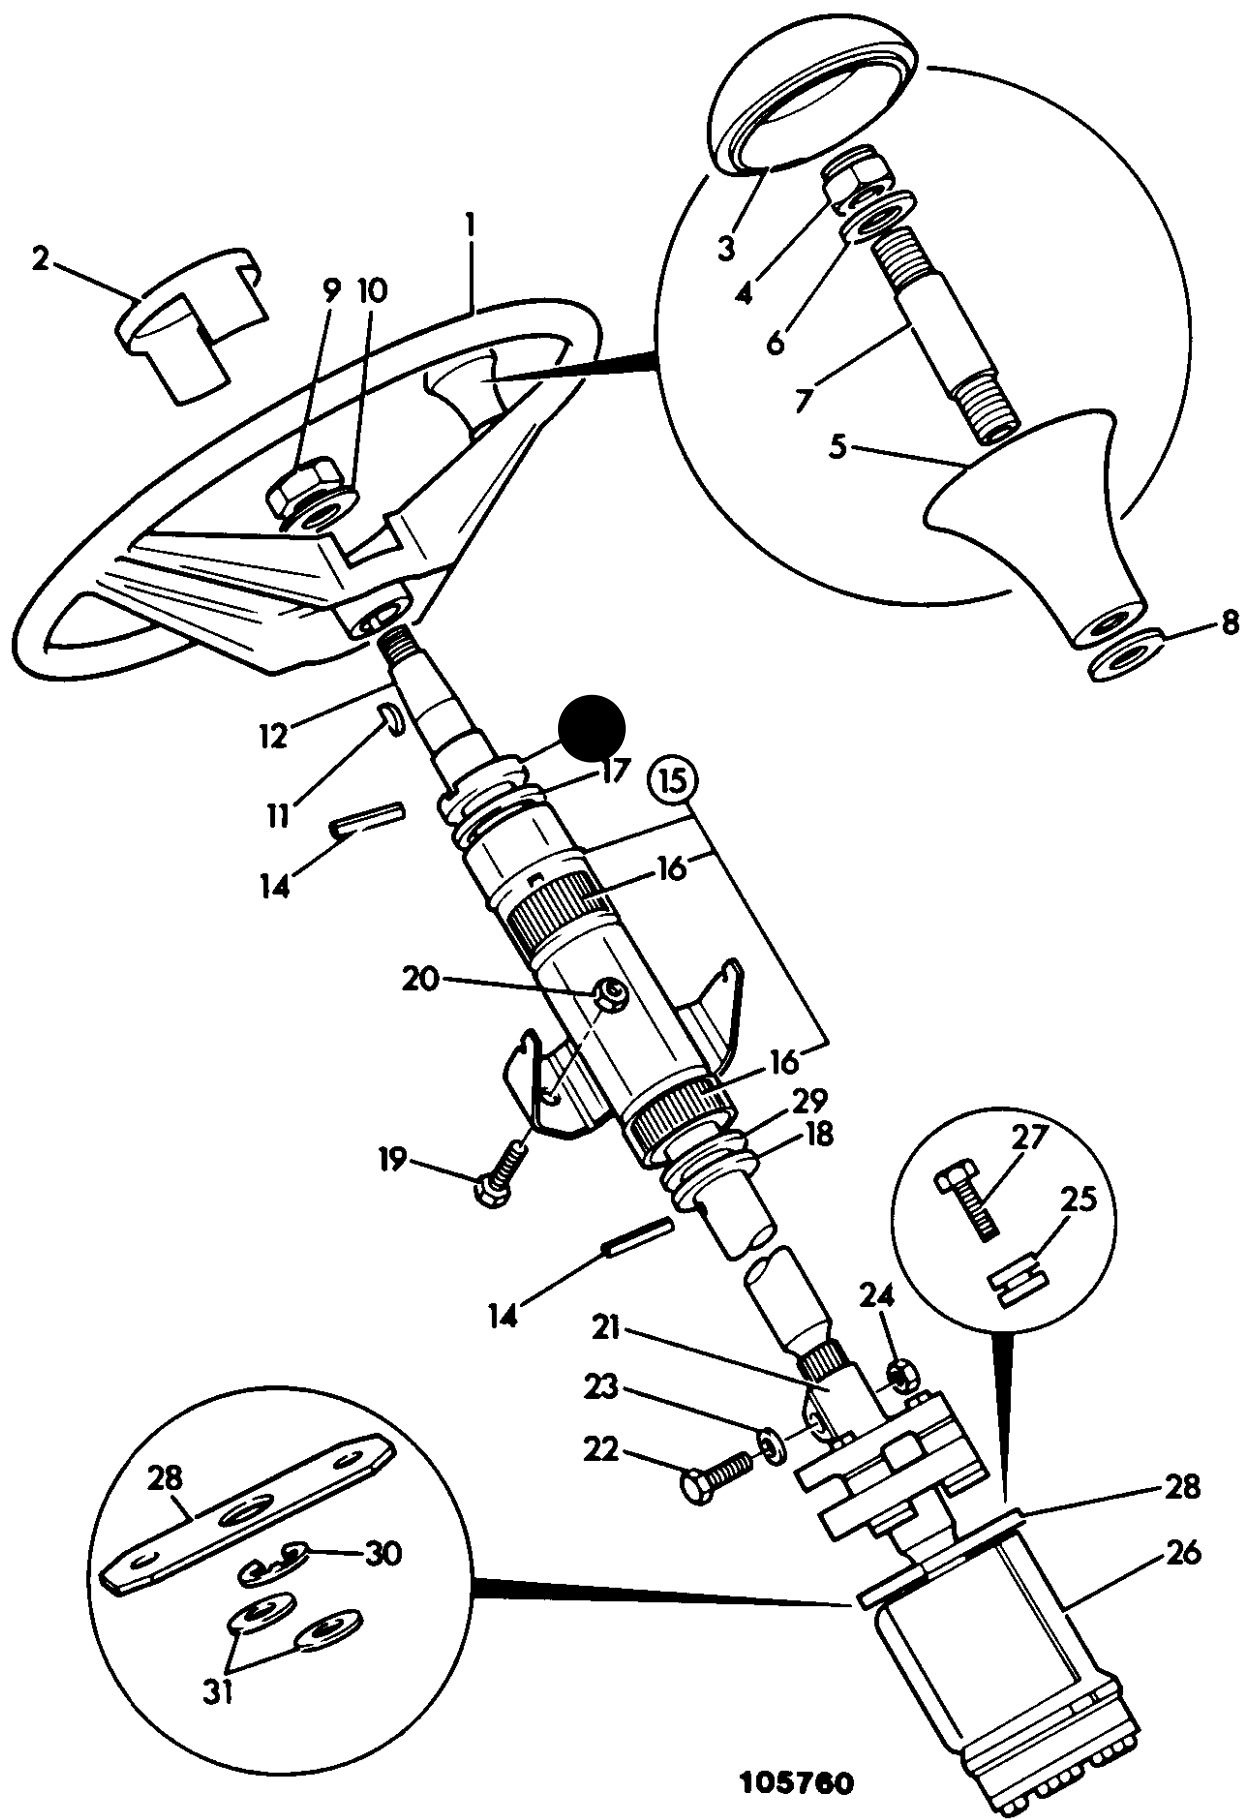

1	116/00522	Wheel steering Supersession >
2	116/00408	Cover
3	123/00492	Cap
4	1340/0103Z	Nut 5/16" UNF < Supersession
5	123/00491	Knob
6	1420/0007Z	Washer (M8) Supersession >
7	150/32303	Spindle
8	1410/0003Z	Washer (3/8" Small) < Supersession
9	1340/0602Z	Nut Supersession >
10	1411/0007Z	Washer 5/8 Supersession >
11	G18/2	Key < Supersession
12	123/01390	Shaft steering column < Supersession
13	831/00074	Washer Grooved
14	826/00793	Pin tension Supersession >
15	192/16400	Column Steering Supersession >
16	:917/02000	Bearing
17	1410/0009Z	Washer < Supersession
18	1420/0012Z	Washer M20 < Supersession
19	1305/0206Z	Setscrew (3/8" UNF x1") < Supersession

20	1340/0203Z	Lock Nut 3/8" UNF < Supersession
21	:45/905400	Coupling Supersession >
21	45/905400	Coupling Supersession >
21	:821/00190	Clip 'E' < Supersession
21	⊘ Not for sale	Multi Supersession <M
22	826/00653	Bolt
23	823/00232	Washer
24	1340/0103Z	Nut 5/16" UNF < Supersession
25	255/35203	Mount Resilient < Supersession
26	⊘ Not for sale	'See Remark' Steering unit see frame E3-10-1
27	1315/0409Z	Setscrew M10 x 35 < Supersession
28	123/00161	Plate Retainer
29	823/00408	Washer 2mm
30	821/00173	Clip E <M Use with 45/901000 item 21
30	821/00190	Clip 'E' < Supersession Use with 45/905400 item 21
31	823/00326	Washer M10 X 30mm