


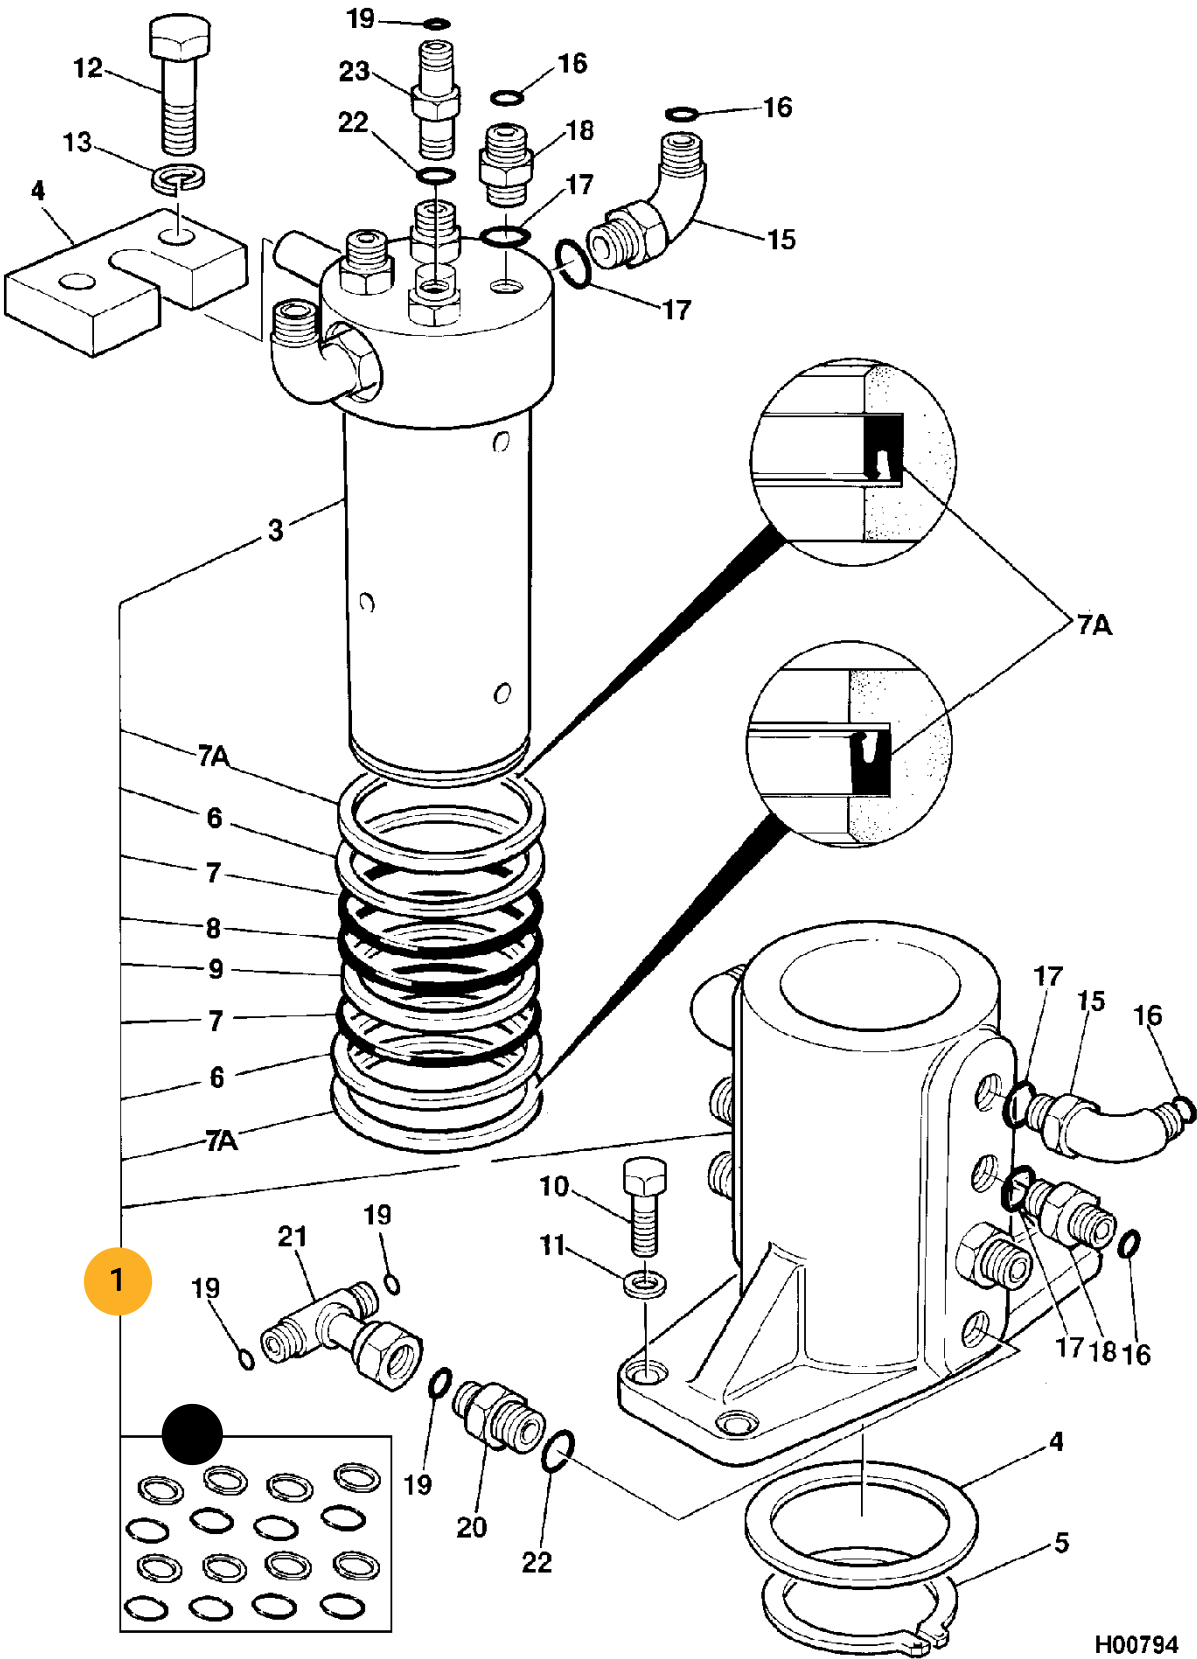

1	45/908500	Joint rotary <31.05.04 Supersession >	0
1	45/920083	Joint Rotary 7 port >01.06.04 < Supersession For Parts See Index E3-10-3	1
2	⊘ Not for sale	Shell joint rotary	0
3	:45/908502	Core joint rotary	0
4	:45/908503	Ring < Supersession	0
5	:45/908504	Circlip < Supersession	0
6	⊘ Not for sale	None serviced part < Supersession Use item 9A	2
7A	⊘ Not for sale	No longer available Use item 9A	0
7	⊘ Not for sale	None serviced part < Supersession Use item 9A	0
8	⊘ Not for sale	No longer available Use item 9A	0
9A	:45/908530	Kit-seal <31.05.04 < Supersession Contains items 7A, 8 & 9	1
9A	45/920101	Kit Seal >01.06.04 use in Rotary Joint 45/920083	1
9	⊘ Not for sale	No longer available Use item 9A	0
10	1315/0303Z	Setscrew M8 x 16 G8.8 < Supersession	0
11	823/00415Z	Washer spring < Supersession	0

12	1315/0407Z	Setscrew M10 x 25 mm < Supersession	0
13	⊘ Not for sale	Washer spring Supersession >	0
14	⊘ Not for sale	Stop joint > No Longer Available	0
15	⊘ Not for sale	Elbow 90deg. male Supersession >	0
16	2401/0605	O Ring	0
17	2401/0505	O Ring	0
18	816/17005	Adapter straight thread	0
19	2401/0603	O Ring	0
20	816/11006	Adapter straight thread > No Longer Available	0
21	816/56003	Adapter tee union	0
22	2401/0503	O Ring	0