


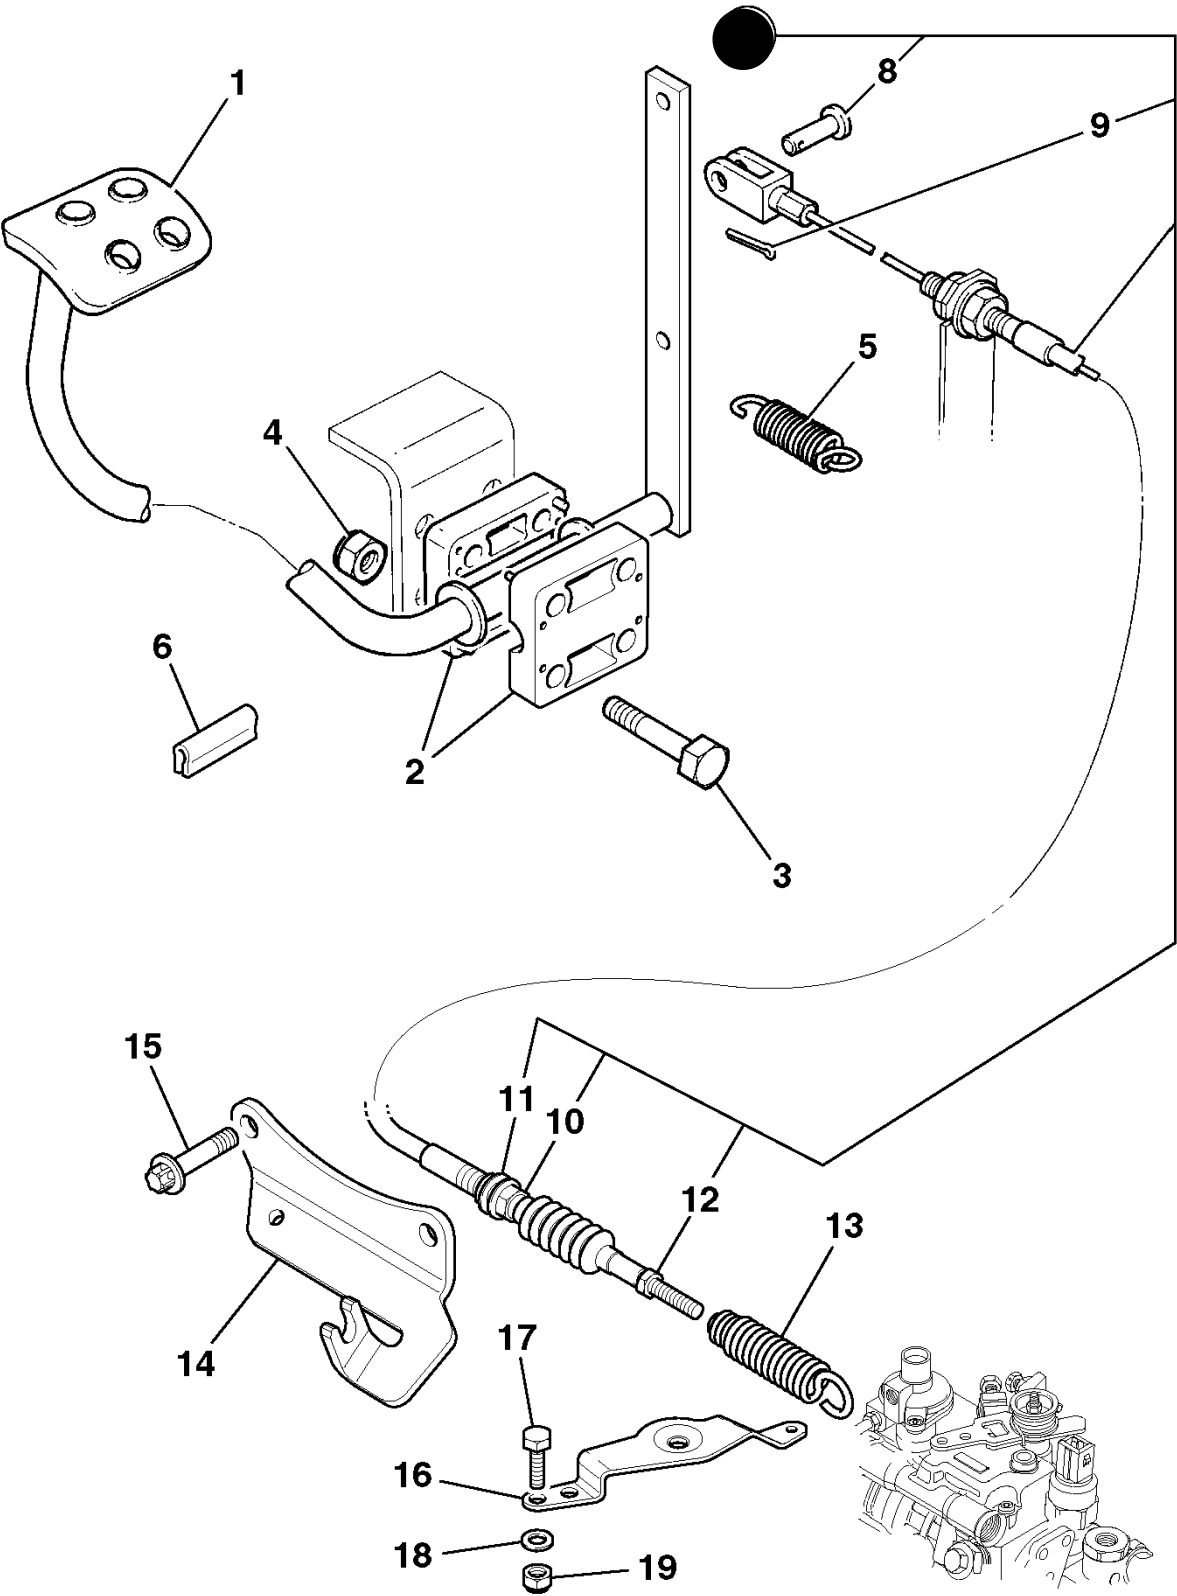

A	⊘ Not for sale	Cab Accelerator Assembly	1
1	335/05196	Pedal accelerator	1
2	160/00486	Bearing accelerator pedal	2
3	1315/3312D	Bolt (M8 x 50)	2
4	1370/0203D	Nut Lock M8 < Supersession	2
5	814/00359	Spring	1
6	926/04800	Strip Edging < Supersession 20mm Length required	0
7	331/51612	Cable accelerator 2400mm	1
8	:2101/0002	Pin clevis	1
9	:2103/0305	Pin Split 1/16 x 1/2 < Supersession	1
10	:1340/0002Z	Nut < Supersession	2
11	:1411/0002Z	Washer (5/16" Medium) Supersession >	2
12	:1370/0201Z	Nut Standard M8 Supersession >	1
13	814/10179	Spring Overload	1
14	331/51327	Bracket throttle reaction	1
15	1319/0308Z	Screw star drive M8 x 30	2
16	331/51328	Lever throttle extension	1
17	1315/0203Z	Setscrew M6x16 Supersession >	2
18	1420/0006Z	Washer (M6) Supersession >	2
19	1370/0103Z	Nut Lock, M6 < Supersession	2

