


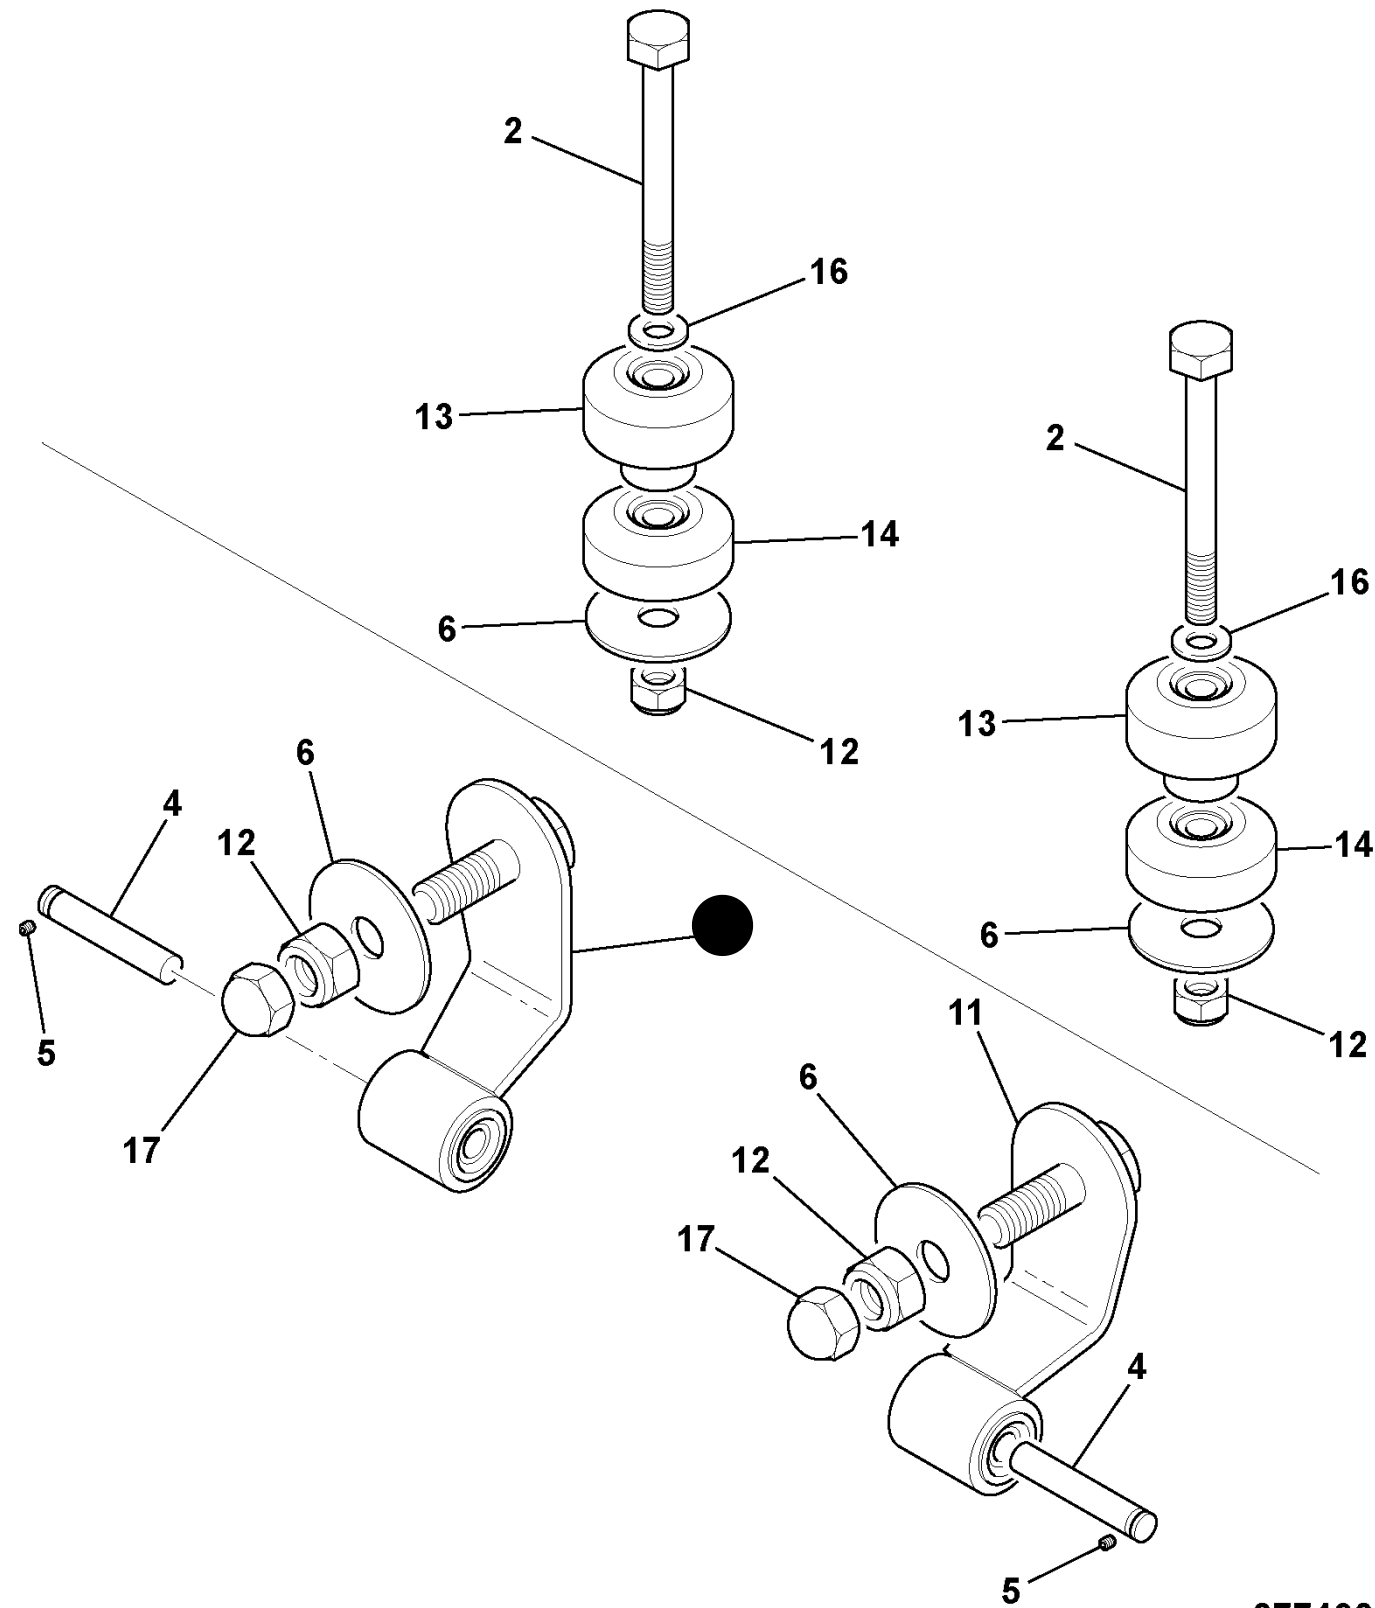

A	⊘ Not for sale	Kit Cab Mount	1
2	826/10746	Bolt M16 x 160mm For item 13 and 14	2
4	826/11259	Pin Hinge For item 10 & 11	2
5	1390/0203	Screw set For item 4	2
6	120/16902	Plate Rebound < Supersession For item 10,11,13, & 14	2
7	1315/0408D	Setscrew M10 x 30 G8.8 < Supersession Rear cab to Seat Base	2
8	1420/0008D	Washer M10 < Supersession Cab/Can to SeatBase	4
10	331/61003	Hinge LH,assembly with bush inserted < Supersession comes with rubber bush	1
11	331/61004	Hinge RH,assembly with bush inserted < Supersession comes with rubber bush	1
12	1370/0603D	Nut Lock M16 < Supersession For item 10 and 11	2
13	331/51830	Mounting Upper < Supersession	1
14	331/48082	Mounting Cab/Can Lower Front Mounts	1
15	1315/0407D	Setscrew M10 x 25mm G8.8 < Supersession Front Cab to Seatbase	2
16	1420/0011D	Washer (M16) < Supersession For item 13 and 14	2
17	835/10111	Nut M16 For item 2,10 & 11	1

18	835/10110	Nut M10 Nut Cover For item 7 & 15	1
19	823/10324	Washer rebound Increase clearance between pump and seatbase	4