




504B > B2-4-1 CAB

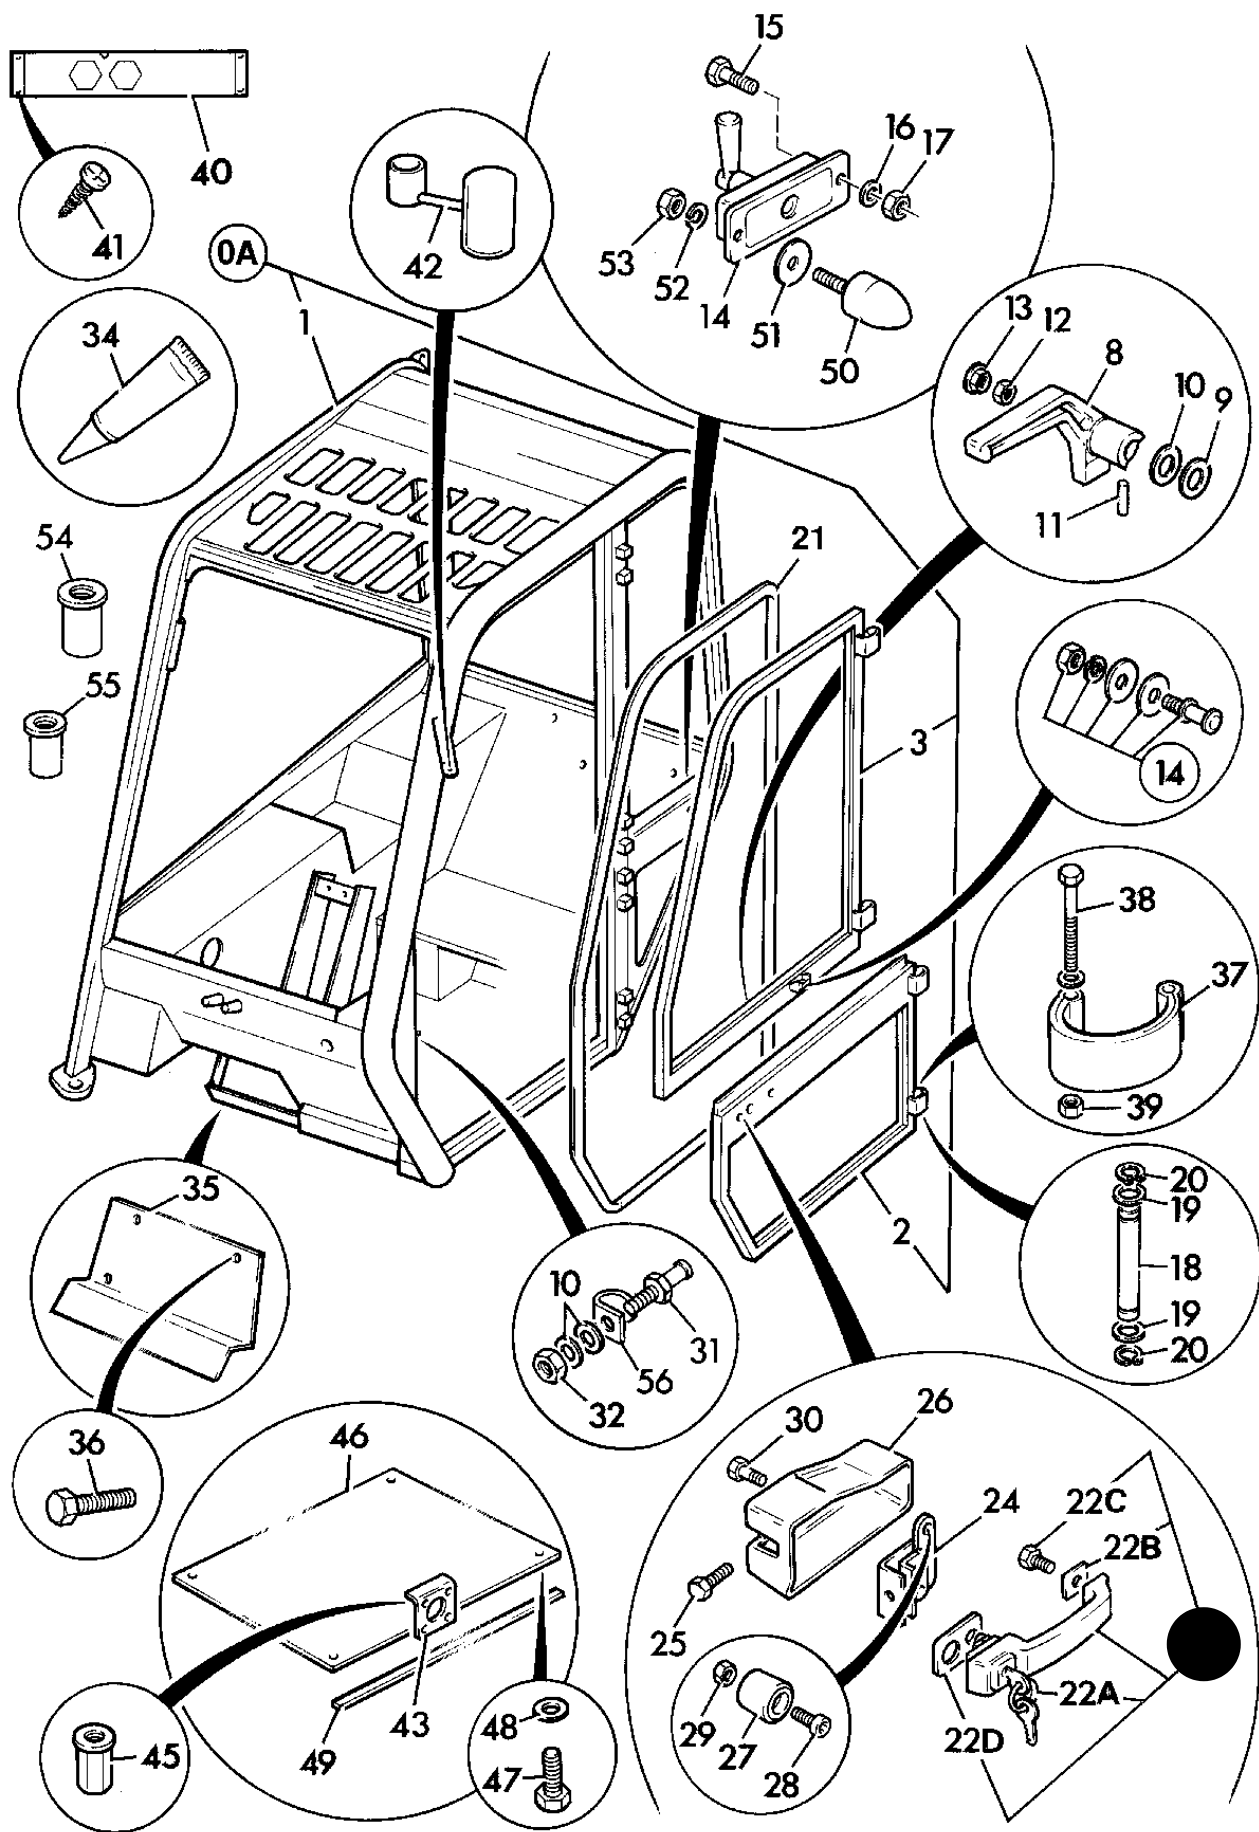

189863

A	⊘ Not for sale	Cab frame & doors as supplied Not supplied glazed	1
1	⊘ Not for sale	Cab frame > No Longer Available	1
1	⊘ Not for sale	Bracket fender mounting LH Weld on	1
2	:161/00077	Door lower	1
3	:161/00078	Door upper	1
8	120/93202	Handle Lefthand < Supersession	1
9	823/00223	Washer Rubber	1
10	1420/0009Z	Washer Plain M12 < Supersession	3
11	2102/0407	Pin Tension	1
12	1370/0101Z	Nut (M6) Supersession >	1
13	835/00026	Plug	1
14	160/00980	Catch side window kit < Supersession	1
15	1315/0105Z	Setscrew M5 x 20mm	1
16	1420/0005Z	Washer (M5) < Supersession	1
17	1370/0003Z	Nut Lock M5 < Supersession	1
18	162/00097	Hinge pin	4
19	1420/0008Z	Washer Plain M10 Supersession > 3 per hinge pin	12
20	821/00318	Circlip	8
21	926/14900	Seal Rubber < Supersession Approx 5.5m	0

22A	:122/06801	Key No. 1001 < Supersession	1
22D	:123/00529	Grommet < Supersession	2
22B	:123/00530	Grommet	2
22	123/02590	Handle incl. grommets & key < Supersession	1
22C	:1315/0210Z	Bolt M6 x 40mm long	2
23	1391/3208Z	Capscrew M6 x 30mm Supersession >	2
24	121/13400	Lock Door < Supersession	1
25	826/00687	Screw < Supersession	2
26	123/00569	Cover Lock, LH	1
27	120/92807	Knob interior Supersession >	1
28	1391/3205Z	Capscrew M6x20 Supersession >	1
29	1370/0102Z	Nut Thin, M6 < Supersession	1
30	826/00726	Bolt Supersession >	2
31	120/77505	Bolt closing < Supersession	1
32	826/00622	Nut	1
34	4103/0901	Adhesive super glue For joining ends item 21 > No Longer Available	0
35	162/00787	Plate front cover	1
36	1315/0101Z	Setscrew M5x12 < Supersession	5
37	157/18003	Strap check	1
38A	823/00529	Washer M8	4
38	826/11101	Bolt (M8 x 70)	2

39	826/11042	Nut Lock, M8	2
40	⊘ Not for sale	Plate ROPS/FOPS	1
41	826/00115	Screw	4
42	121/59400	Mirror , External Supersession > <i>401/J1885</i>	1
42B	:121/59401	Bracket Supersession >	1
42A	:993/99564	Mirror Glass	1
43	162/00826	Bracket cannon mounting	1
45	826/01277	Nut Vibration Proof	2
46	162/00920	Cover cab base Fits under cab base using 47,48 & 49	1
47	1315/0405Z	Setscrew M10 x 20 mm < Supersession	4
48	1420/0008Z	Washer Plain M10 Supersession >	4
49	926/10100	Strip Seal rubber < Supersession	0
50	160/00782	Stop bump	1
51	823/00537	Seal Washer	1
52	1425/0005Z	Washer Spring (M5) < Supersession	1
53A	⊘ Not for sale	Spacer Deluxe Cab With Radio	1
53	1370/0001Z	Nut (M5) < Supersession	1
54	826/01103	Nut Rivet, M8 < Supersession Rivet-nut M8 supplied fitted to cab.	4
55	826/01177	Nut rivet M5 csk head Fitted to cab	28
56	140/00618	Guard German	1

57	926/10100	Strip Seal rubber < Supersession Approx 550mm required under rear of cab	0
58	2410/1114	Grommet Blind, 38.1x3.5 mm To blank steer valve control when not fitted.	1
59	2410/1103	Grommet Blind, 9.5 Dia X 3.5 Thk To blank steer valve control when not fitted.	2