


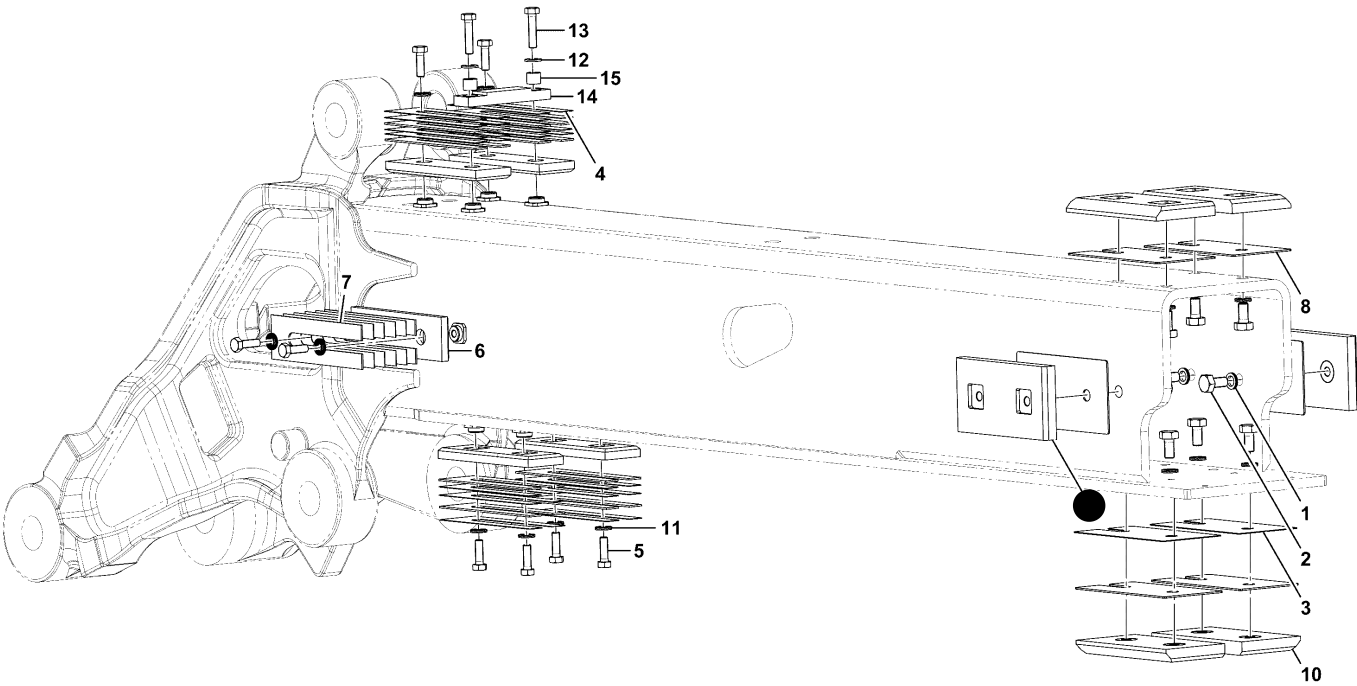

|    |            |                                       |    |
|----|------------|---------------------------------------|----|
| A  | 403/J0256  | GA WEAR PAD TM110                     | 1  |
| 1  | 823/10261  | Washer Nordlock M10<br>< Supersession | 12 |
| 2  | 1318/0405D | Screw M10 x 20 Nylon patch            | 12 |
| 3  | 332/W0650  | Shim 150 x 75 x 1.5mm                 | 6  |
| 4  | 403/Z6346  | Shim Wearpad 0.5 x 150 x 45           | 22 |
| 5  | 1318/0307D | Setscrew M8 X 25                      | 10 |
| 6  | 334/H2334  | Pad Wear ASSY - 11 THK                | 6  |
| 7  | 403/Z6343  | Shim Wearpad 1.6 x 150 x 45           | 12 |
| 8  | 332/W0648  | Pad Shim150 x 75 x 0.7mm              | 2  |
| 9  | 332/W0424  | Pad Wear 150 x 75 x 14.25mm           | 2  |
| 10 | 403/S0359  | Pad                                   | 4  |
| 11 | 332/F8518  | Washer Nordlock M8 Large              | 10 |
| 12 | 1420/0007D | Washer M8<br>< Supersession           | 2  |
| 13 | 1318/0309D | Setscrew M8 x 35                      | 2  |
| 14 | 403/W4202  | Pad Nylon                             | 1  |
| 15 | 403/W5433  | Spacer                                | 2  |