


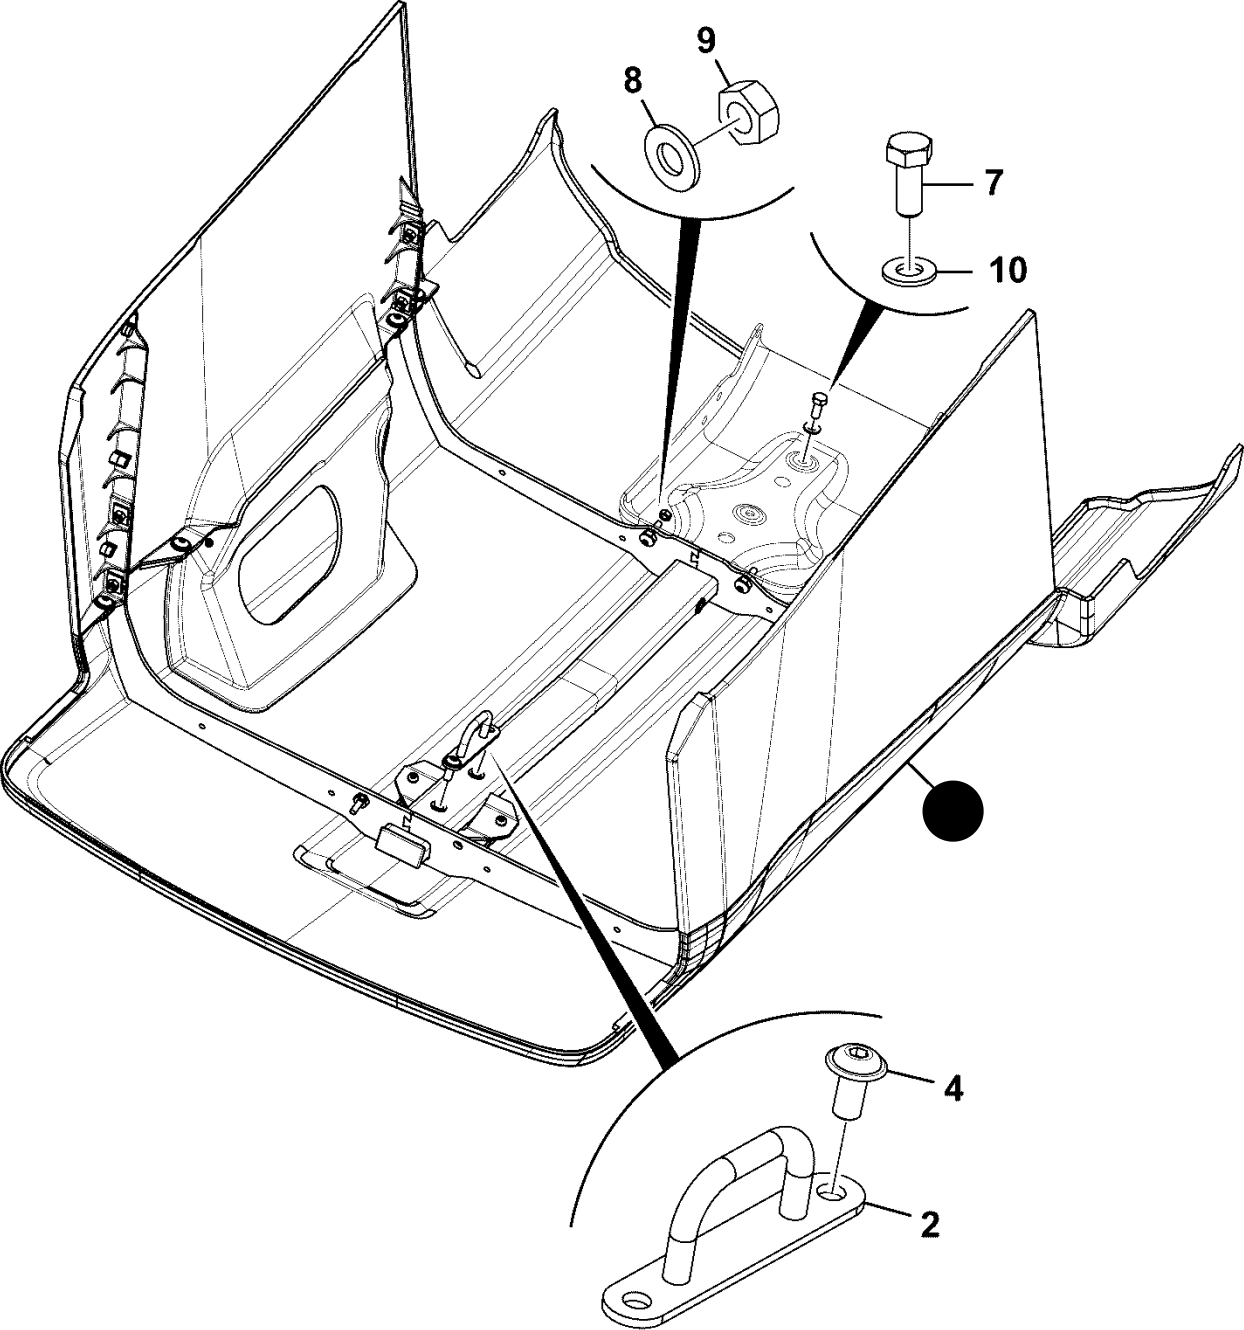

A	⊘ Not for sale	Installation Bonnet	1
1	128/G2288	Bonnet Assembly ABI	1
2	128/G3454	Striker Bonnet Lock	1
4	826/11284	Screw M8x16	2
7	1315/0305Z	Setscrew M8 x 20mm < Supersession	2
8	1420/0006Z	Washer (M6) Supersession >	2
9	1370/0101Z	Nut (M6) Supersession >	2
10	1420/0007Z	Washer (M8) Supersession >	2