


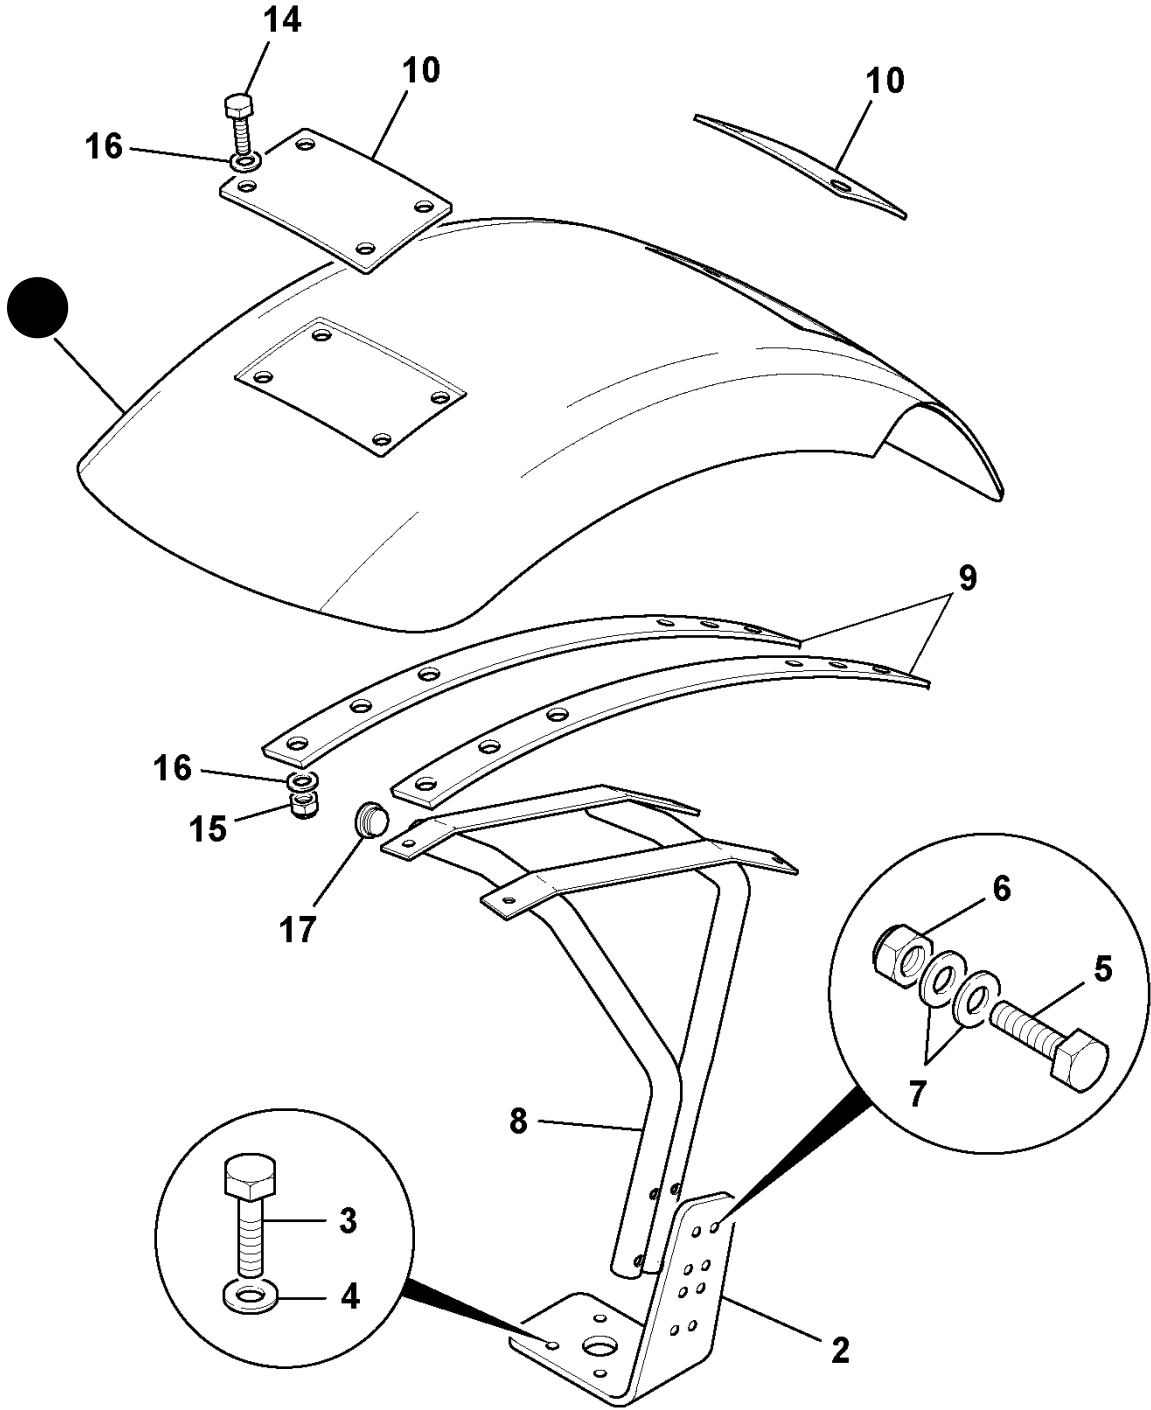

702960

A	⊘ Not for sale	Installation front fenders	1
1	331/23631	Fender right hand front 418mm wide	1
1	331/23632	Fender left hand front 418mm wide	1
2	331/31864	Bracket left hand, fender	1
2	331/31865	Bracket right hand, fender	1
3	1318/3512Z	Bolt M12X50mm long TUF-LOK	8
4	1420/0009Z	Washer Plain M12 < Supersession	8
5	1315/3416Z	Bolt M10 x 70 < Supersession	8
6	1370/0303Z	Nut Lock M10 Supersession >	8
7	1420/0008Z	Washer Plain M10 Supersession >	16
8	335/04161	Bracket upper left hand	1
8	335/04162	Bracket upper right hand	1
9	331/32030	Strip Fender Mounting 20"	4
10	265/00533	Plate back	4
14	826/10881	Bolt M8 x 40 LG	12
14	1315/0310Z	Setscrew M8x40 G8.8 < Supersession	12
15	826/11042	Nut Lock, M8	12
15	1370/0203Z	Nut Lock, M8 < Supersession	12
16	823/00529	Washer M8	24
16	1420/0007Z	Washer (M8) Supersession >	24
17	331/19852	Cap blanking Supersession >	4

