


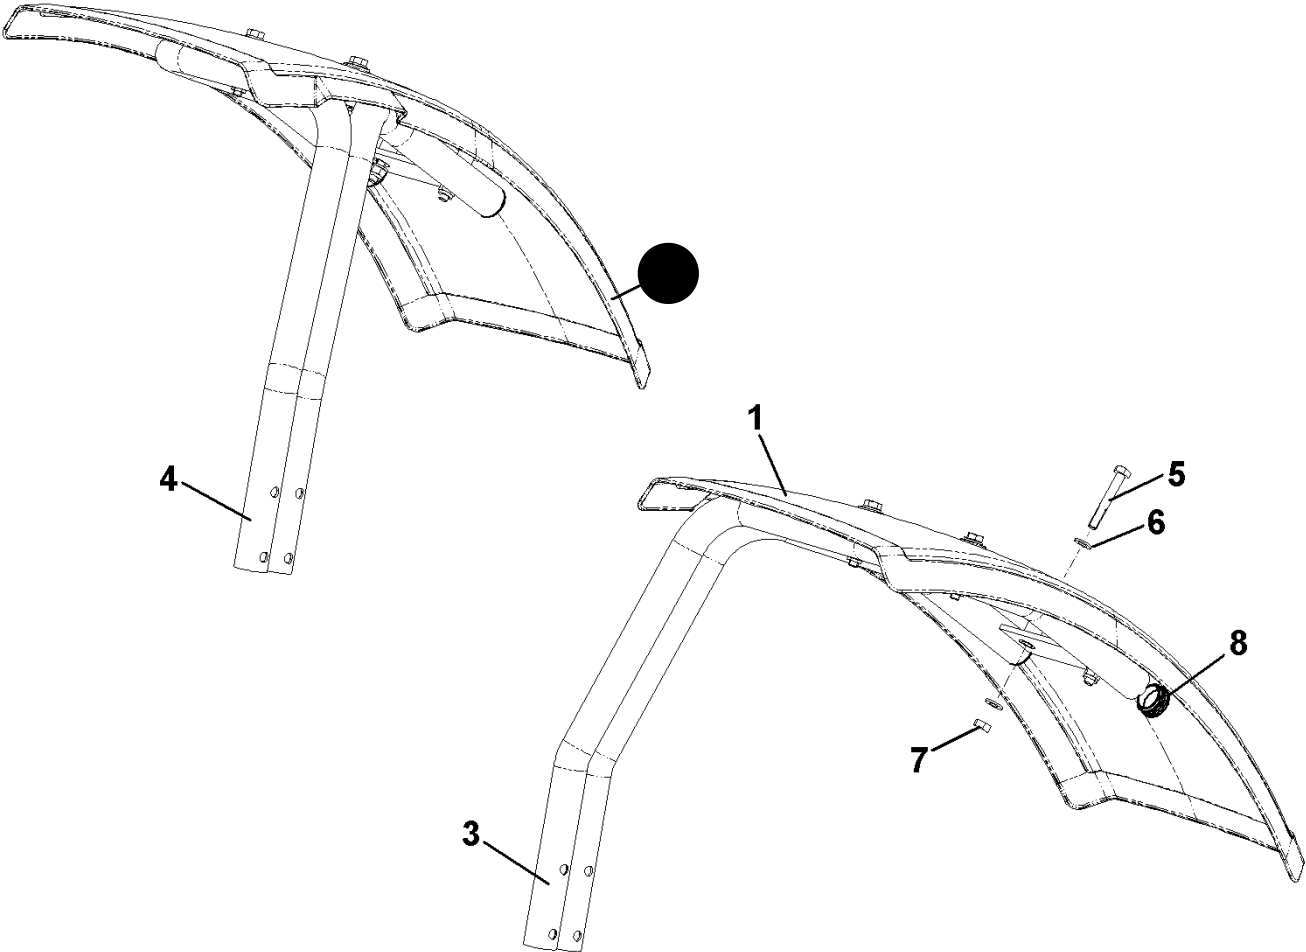

A	⊘ Not for sale	Assembly front fenders AWS	1
1	333/F0386	Fender front LH, AWS black Supersession >	1
2	333/F0387	Fender front RH, AWS black Supersession >	1
3	128/D0063	Stay LH front fender AWS < Supersession	1
4	128/D0064	Stay RH front fender AWS	1
5	1318/3416Z	Bolt M10 x 70 nylon patch	8
6	1420/0008Z	Washer Plain M10 Supersession >	16
7	1370/0301Z	Nut Standard, M10 Supersession >	8
8	835/10035	Plug Black Plastic	4