


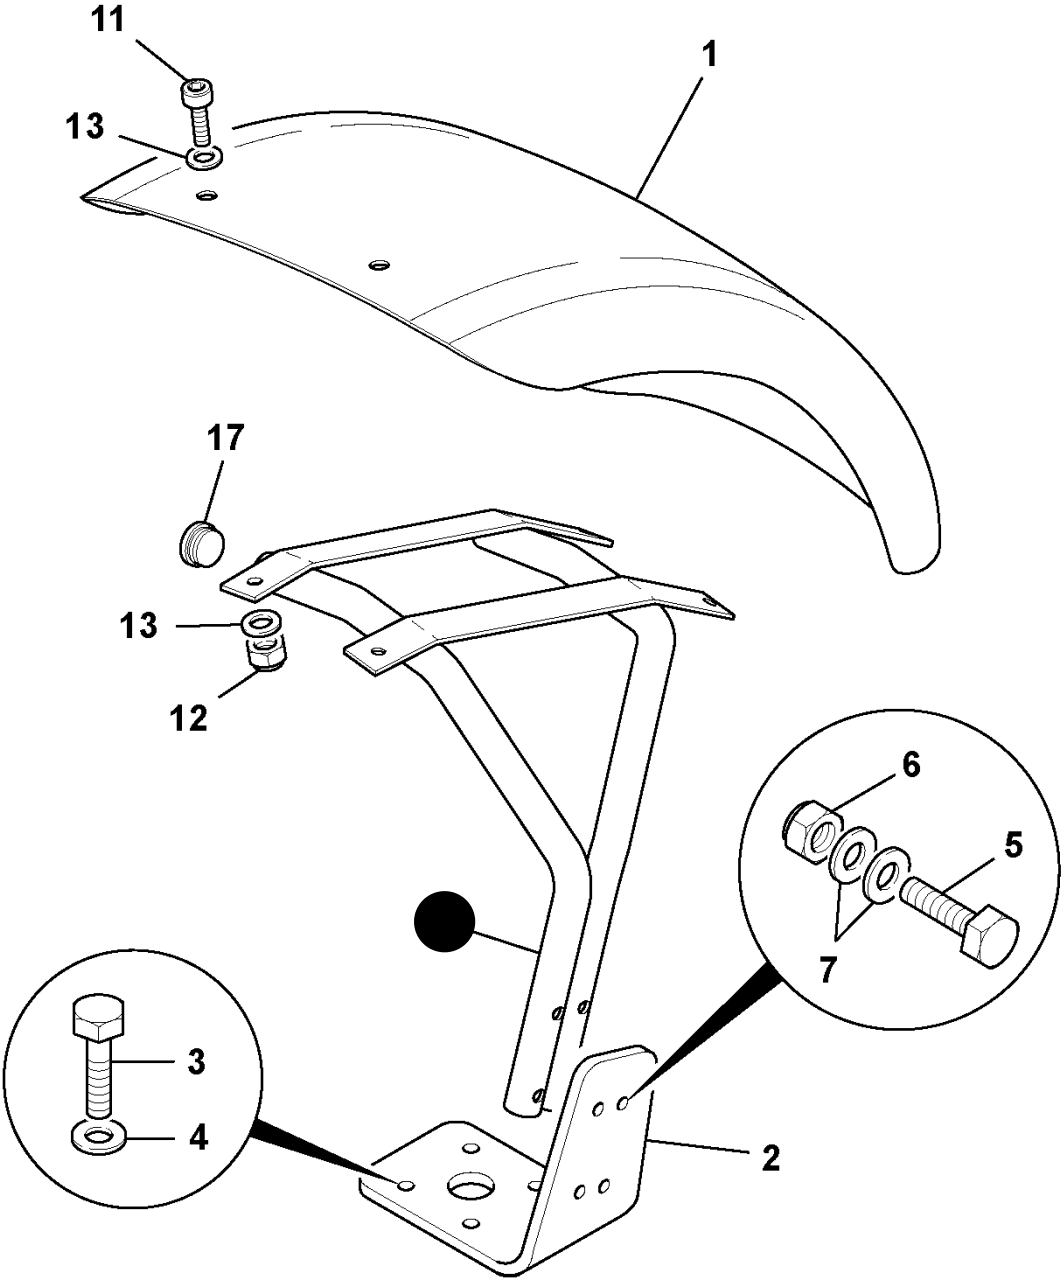

702950

A	⊘ Not for sale	Installation front fenders 2WS	1
1	331/31574	Fender Front, LH 2WS, 343mm wide	1
1	331/31575	Fender Front, RH 2WS, 343mm wide	1
2	331/31147	Bracket left hand, fender	1
2	331/31148	Bracket right hand, fender	1
3	1318/3512Z	Bolt M12X50mm long TUF-LOK	8
4	1420/0009Z	Washer (M12) < Supersession	8
5	1315/3416Z	Bolt M10 x 70 < Supersession	8
6	1370/0303Z	Nut Lock M10 Supersession >	8
7	1420/0008Z	Washer (M10) Supersession >	16
8	335/04161	Bracket upper left hand	1
8	335/04162	Bracket upper right hand	1
11	826/10643	Screw M8X30 Black Button Head	8
11	1315/0308Z	Setscrew M8 x 30	8
12	826/11042	Nut Lock, M8	8
12	1370/0203Z	Nut Lock, M8 < Supersession	8
13	823/00529	Washer M8	16
13	1420/0007Z	Washer (M8) Supersession >	16
17	331/19852	Cap blanking Supersession >	4